


Hardware Build Guide (Windows Software)

Guide to assembling the PIR sensor hardware and software for any enclosure.

Written By: Mike Vanis

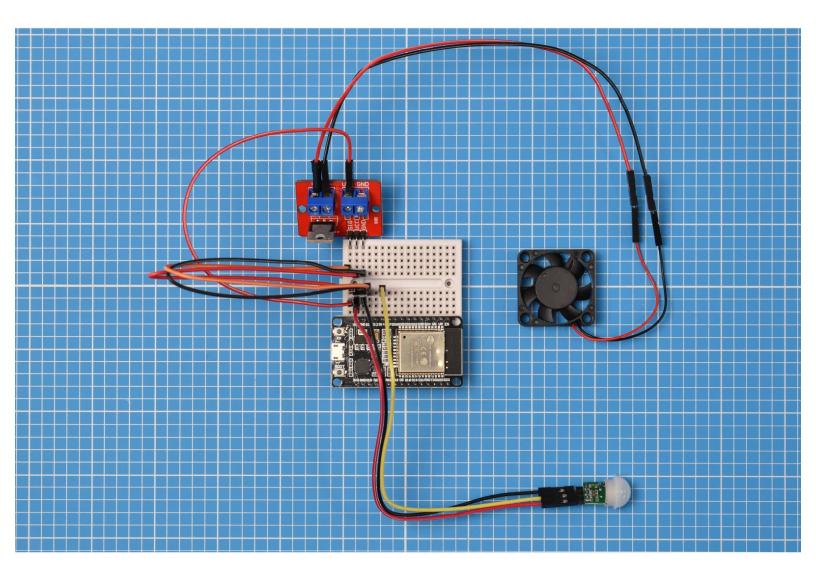

INTRODUCTION

This guide takes you through the steps to building your devices. In this stage we will show you how to:

- upload firmware to the ESPS32S board
- set up a network between two Yo-Yo devices
- assemble the hardware

Do take your time to go through each the steps. If you have any problems or need support you can visit our <u>FAQs pages</u>.

Once you have finished the assembly you can move to Stage 2 and build your own enclosures.

TOOLS:

• A computer running OSX 10.13 or later or Windows 10 with a spare USB port and Internet connection. Note: The ESP32S board will only connect to 2.5GHz Wi-Fi networks and with names less than 32 characters in length. (1)

• Small crosshead screwdriver (1)

PARTS:

- Micro USB cable (1)
- USB power supply (1)
- ESP32S board (1)
- Breadboard (1)
- Male to Male Jumper Wires (6)
- Female to Male Jumper Wires (3)
- IRF520 MOSFET module (1)
- PIR sensor (1)

```
60 cm computer fan for Thaumatrope and
Twist enclosure designs (1)
5V
Mini computer fan for Feather and
```

Ribbon designs (1)

5V

Step 1 — Download the USB driver

Image: Section of the section of t	Image: State of the s
Download for Windows 10 Universal (v10.1.9) Note: The latest version of the Universal Driver can be automatically installed from Windows Update. Reference Reference Reference Reference Windows 10 Universal Countract Coll Listic Download for Windows 7/8/8.1 (v6.7.6)	• • • • • • • • • • • • • • •
Flatform Selected Important Information regarding the Silicon Lido website: this site uses coales to improve user experience and some information regarding the Silicon Lido website: this site uses coales to improve user experience and source is ended used set. Neveral coales and set user to ended use due to disability of the selected set user to ended users. Neveral coales Never the disability disability Accept Mark set user and users in the OTINE_Meeting_Dimension in the selected set.	These

- Download the USB driver so the ESP32 board can communicate with your computer. The Windows version can be found <u>here</u>.
- Unzip the download and open the installer **CP210xVCPInstaller_x64**.
- (i) You may have to accept the Windows Defender warning so that the driver can be installed successfully.

Step 2 — Install the USB driver

Welcome to the Device Driver Installation Wizard!	Completing the Device Driver Installation Wizard
This wizard helps you install the software drivers that some computers devices need in order to work.	The drivers were successfully installed on this computer.
	You can now connect your device to this computer. If your device came with instructions, please read them first.
	Driver Name Status
To continue, click Next.	✓ Silicon Laboratories Inc Ready to use


- Click **Next** to go through the installation wizard.
- After installing successfully, the wizard should report that the driver is ready to use. Click Finish to exit the wizard.

Step 3 — Download the Yo-Yo Firmware Uploader

teleases Tags		
Latest release	Yo-Yo Machines Firmware Uploader	Image: Construction of the co
Venified Compare •	Bebug button prints out serial from the ESP32 Mew build on Travis for going back to Mac OS High Sierra More helpful output on the console Minor UI fixes Assets Assets YoYoMachines-Firmware-Uploader.app.zip 12.5 MB YoYoMachines-Firmware-Uploader.exe.zip 14.2 MB Source code (zip) Source code (tar.gz)	 ← → + ← → + has R < 1 benetada + diat ✓ Oucle accession - Date modified ✓ Determodified ✓ Determodified
(Pre-release)		1 item 1 item selected 142.048

- The Yo-Yo Firmware Uploader will enable you to upload the latest firmware to your ESP32S board. Download the latest release <u>here</u>.
- *i* Firmware is code the ESP32S board needs in order to work as a Yo–Yo device. It's called firmware because it is software used to configure hardware soft + hard = firm. Geddit?
- Unzip the downloaded app and open the contents of the extracted folder. The app should be inside the extracted folder.
- A Please use <u>7zip</u> or <u>WinRAR</u> to unzip the files. WinZip will not work.

Step 4 — Plug in your ESP32S board

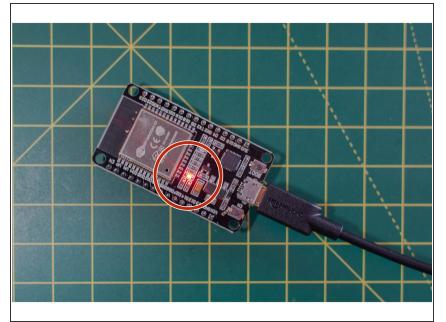

 Plug your ESP32S board into your computer with the USB cable. You should see a red light on the board, which means it is powered up.

Step 5 — Choose your Serial Port

Project Projec	Yo-Yo M	lachines				>
Project Project Ves, erase WiFi details on the device. Upload Debug Refreshing serial list		Yo-Yo Machines Fi	rmware Uploader			
Erase WiFi Details Yes, erase WiFi details on the device. Upload Debug Refreshing serial list	Device	СОМЗ		~	Refres	h Lis
Upload Debug	Project				_	
Refreshing serial list	Erase WiFi De	tails 🗌 Yes, erase WiFi details	on the device.			
Refreshing serial list Refreshed serial list		Up	load		De	bug
Ketreshed serial list	Refreshing se	rial list				-
	Refreshed ser	rial list				
<	<					~

- Open the Yo-Yo Firmware Uploader and select the device in the drop down menu. You may need to press "refresh list" if you do not see it in your list.
- Your board's serial port should appear as something along the lines of **COM#** (COM3 in this case).
- (i) If the device doesn't appear, double check that your USB cable has a data line. Some USB cables only have power lines, as they are used for charging only.
 - Leave the 'Erase Wifi Details' box unticked.

No-Yo Mach	nes	-	
	Yo-Yo Machines Firmware U	ploader	
Device	COM3	~	Refresh L
Project			
Erase WiFi Details	Ves, erase WiFi details on the det	vice.	
	Upload		Debug
1.00			>
< Idle			

Step 6 — Choose your project


- Use the 'project' drop-down menu to select which device you are making.
- The menu is blank on this image. Click it to get a list of projects -make sure to choose the right one for the device you're making! We'll be adding new ones periodically...

Step 7 — Upload the Firmware

Yo-Yo Machines − □ ×	📧 Yo-Yo Machines — 🗆 🗙
Yo-Yo Machines Firmware Uploader	Yo-Yo Machines Firmware Uploader
Device COM3 ~ Refresh List	Device COM3 V Refresh List
Project	Project
Erase WiFi Details Yes, erase WiFi details on the device.	Erase WiFi Details 🔲 Yes, erase WiFi details on the device.
Upload Debug	Upload Debug
endordsy v2.2 Sara Lyour COM3 Charles Josef COM3 Charles 155 Charles 155 Charl	Corput is 6040ki MCC Data Afrida Son Uplicating rath Buth unning Company fast Afrida Son Company fast Afrida Son Afrida Son Hand Afrida Son Son Soccess

- When you're ready, click on **Upload** to upload the latest firmware.
- When prompted, hold the **BOOT** button on your board to set it to "programming mode". You can let go of the button once you see the text "Writing" in the console text.
- If you receive an error, please make sure you have selected the correct device in the Firmware Uploader, and that you have pressed the 'BOOT' button as described above.
- When the uploader finishes transferring the firmware to the device, it will say "Success!" If you have another device to set up, you can repeat this process with the new ESP32S board.
- (i) In the future, if you want to reset a device to factory settings, you can do so by ticking the "Erase WiFi Details" box and re-uploading the firmware.

Step 8 — Choosing a setup method

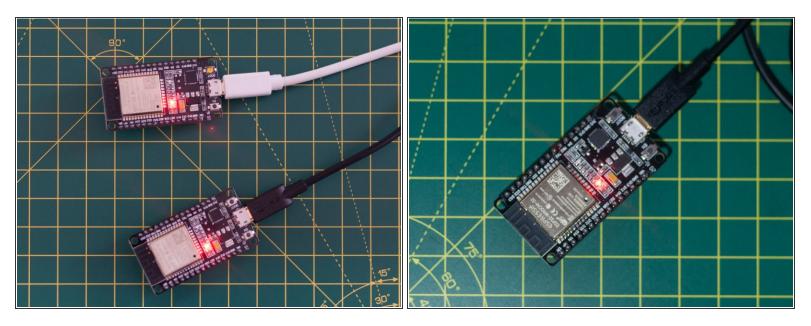

There are two main methods for setting up the network and pairing Yo–Yo Machines. In the first, both devices are set up in the same space, before one of them is sent to a remote location. In the second, devices are set up in separate spaces while coordinating with someone over the phone.

(i) Both methods are covered in the following guide, but setting up a pair in the same space is shown as the primary method.

Step 9 — Connect to Yo–Yo network

Yo-Yo-4080757270	Android System Andr
Password	Sign in to a Wi-Fi network • Yo-Yo-4080757270
Show password	
Advanced options	
Cancel Connect	

- Power up the first ESP32S (with uploaded firmware) using a USB port or USB power supply and wait 10 seconds.
- Now that the firmware is loaded, you can power your ESP32Ss from any USB power supply there is no need to use a computer anymore.
- If you are setting up two devices in the same space, turn on the second ESP32S at least 10 seconds after the first. If you are setting them up remotely, you do not need to synchronise in this way. You should still wait at least 10 seconds before proceeding so the ESP32Ss can establish a network.
- With your mobile device or computer, connect to the newly created Wi-Fi network named "Yo-Yo-####" with the password "**blinkblink**". If you are viewing these instruction online on our website, use another device to connect to the new network so you can keep the instruction open. *This procedure is the same whichever method you are using.*
- Android users may be prompted with a "Sign in to a Wi-Fi network" notification. Click this to open the captive portal (next).

Step 10 — The captive portal

YoYo Machines Your Yo-Yo Code:	
4080 757270	
✓ PHILIPS 2.4GHz DIRECT-6c-HP M118 LaserJet PLUSNET-KTR7 PHILIPS Setup BTWi-fi	÷

- A <u>captive portal</u> should open automatically.
- If the captive portal doesn't open on the device you are using, you may have to try with an alternative smartphone / tablet / laptop.
- (i) The captive portal will show the 5 Wi-Fi networks with the strongest signals. Sometimes you may not see the network that you would like to connect to, if this is the case, move your hardware closer to your router.
- The ESP32S board cannot connect to Wi-Fi networks with names longer than 31 characters. If your Wi-Fi network's name is too long, then you will need to change it to a shorter name to complete the build.

Step 11 — Fill in the Wi-Fi credentials

Yo——Yo Machines	
Your Yo-Yo Code: 4080 757270	
Remote Yo-Yo Code: 3853 269764	
BTWi-fi *	
Password	
Optionally set the remote network:	
Network Name	
Password	
Save	
Interaction Research Studio 2020	


- Fill in the prompts with credentials for the Wi-Fi network that you want to connect to.
- When you are setting up two devices in the same space, you also have the option to include the Wi-Fi credentials of the network you want to send the device to. When you send the second device to someone, it will then automatically connect to their network.
- (i) Including the Wi-Fi credentials of the remote network when setting up a pair will store both the home and remote network credentials to <u>both</u> devices, so it will not matter which device you send away. For security purposes, the Wi-Fi credentials can never be retrieved from the devices later.
- The image here shows two devices being set up in the same space. Note that the Yo-Yo codes have been exchanged automatically. Information on how to enter codes manually for remote setup is in the next step.

Step 12 — Exchange Yo–Yo Codes

Yo Yo Machines Your Yo-Yo Code: 4289 423988	
Remote Yo-Yo Code	
BTWi-fi	
••••••	
Optionally set the remote network:	
My Friends Wi-fi]
•••••	
Save	
Interaction Research Studio 2020	


- (i) If you are setting up two devices in the same space, they have already exchanged Yo-Yo Codes automatically. Feel free to skip this step and press "Save"
 - Copy the text under the heading "Your Yo-Yo Code".
 - Send your Yo–Yo Code to your partner via SMS, email, etc., in exchange for the one from their device.
 - Enter the Yo-Yo Codes for the partner devices in the text field named "Remote Yo-Yo Code". It should be in the same format as yours eg: "4289 423988". Once the forms are complete, press "Save".

Step 13 — Test that the devices are connected

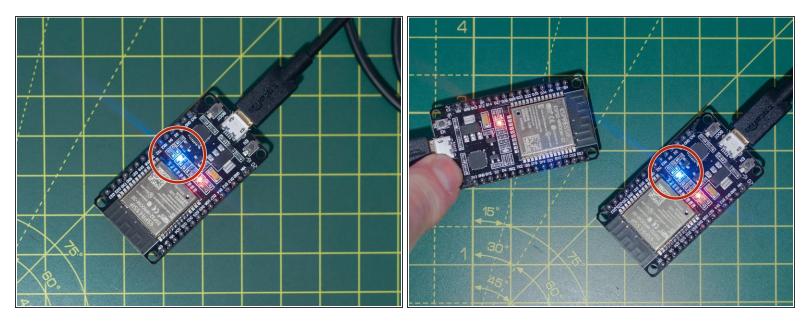


- Wait for the devices' blue LEDs to blink 3 times to confirm the local wifi details are correct. If these details have been inputted incorrectly, please reconnect to the Yo-Yo-#### network and try again.
- Once both devices have confirmed they can connect to their respective wifi networks, the connection between the devices can be tested. This is done by pressing the "BOOT" button of one device to blink the on-board led of the other.

Step 14 — Gather components

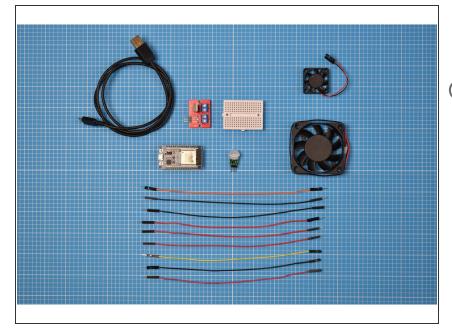


- Gather your components and take a moment to identify them.
- Both small and large fans are shown in this picture, but you will need to use the fan specific to the enclosure design you decide to build.

Step 15 — Circuit overview

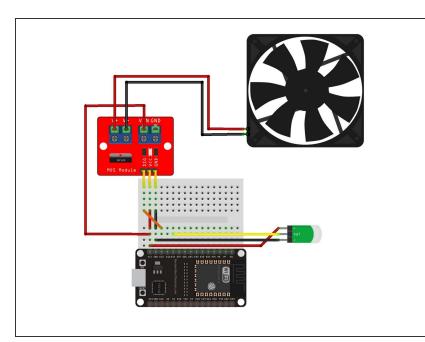


- (i) Here's what our final circuit will look like. If you use the same colours of jumper wires, it will make it easier to identify any mistakes.
 - SIG = MOSFET signal
- OUT = PIR sensor output
- VDD = Supply voltage
- GND = Ground

Step 16 — Breadboard

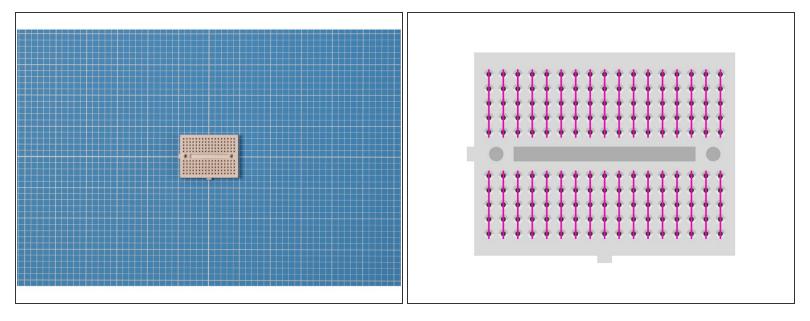


- (i) Bread boards are used to create quick connections between electronic components.
- (i) They have sockets that are electrically connected in rows. The connected sockets are shown as green lines in this diagram.
- (i) Jumper leads and components placed in these rows will be connected together.

Step 17 — Placing the ESP32S board

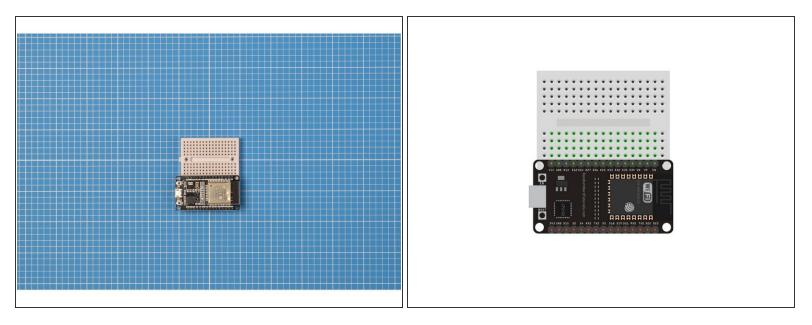


- Place one side of the ESP32S onto the other side of the breadboard. The side used should be the same side as the button labelled EN.
- (i) Make sure all the pins are lined up, leaving an empty hole on either side of the breadboard. Give the ESP32S a good solid push to plug it all the way into the breadboard.

Step 18 — Adding the MOSFET module

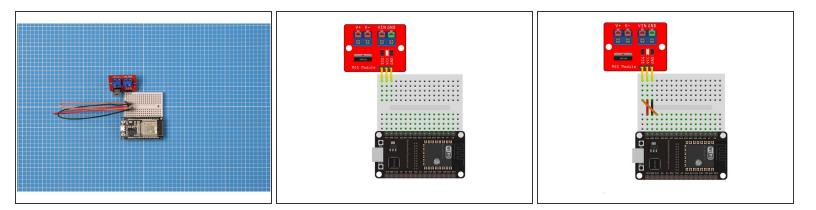


- Place the MOSFET module on the top left side of your breadboard.
- Use 3 male to male jumper wires to plug the MOSFET module into the ESP32S as pictured.

Step 19 — Adding the fan

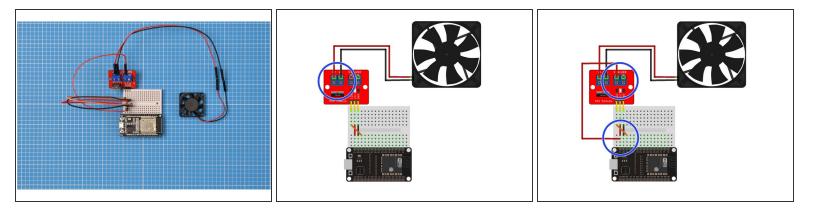


- Plug two male-to-male jumper wires into the MOSFET module's V+ and V- screw terminals
- Plug the other ends of the jumper wires into the fan's white connector.
- Connect the MOSFET module's VIN terminal to the ESP32S's VIN pin with another jumper wire.
- (i) If you are using the larger 60mm fan, the process of adding the fan is identical.

Step 20 — Adding the PIR sensor

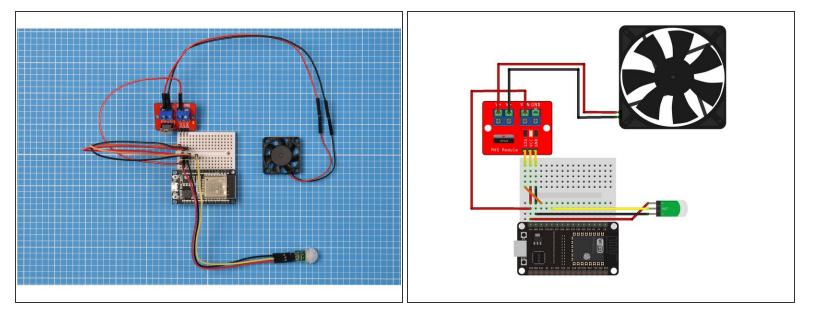


- Connect the PIR sensor's 5V pin to VIN on the ESP32S.
- Connect the PIR sensor's output pin to pin D14 on the ESP32S.
- Connect the PIR sensor's ground pin to GND on the ESP32S.
- Some PIR sensors have slightly different pin configurations. Please double check these before you plug them in! They should always have 5V, output, and ground.

Step 21 — Power up and repeat

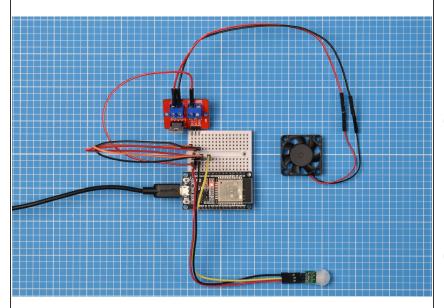


- Plug in your USB micro cable.
- Make another device using the same steps.
- You can make both devices in the same household and post one to your remote partner. Alternatively, they can be made remotely and paired via the internet.
- Use the Network Setup guide to pair two devices. We assume you'll do before you start assembling the electronics, but you can link or relink them at any time.
- When you power up the devices the solenoid moves in and out to indicate that it has been plugged in correctly. Also the blue LED onboard the ESP32S board should blink three times to show the network connection is working.
- Be careful not to put fingers or foreign objects near the fan blades with the device powered on.

Step 22 — Optional: changing the timing of the fan

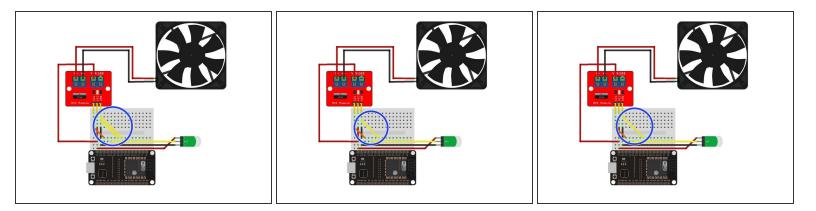

- By default the fan will remain on for 10 seconds after the PIR detects motion, but this can also be changed to 1, 3 or 30 seconds.
- To change the default time from 10 seconds to 1 second, add two jumper leads between pins 25 and 26, and GRD.
- To change the default time from 10 seconds to 3 seconds, add a jumper lead between pin 26 and GRD.
- To change the default time from 10 seconds to 30 seconds, add a jumper lead between pin 25 and GRD.

Step 23 — Check it's working

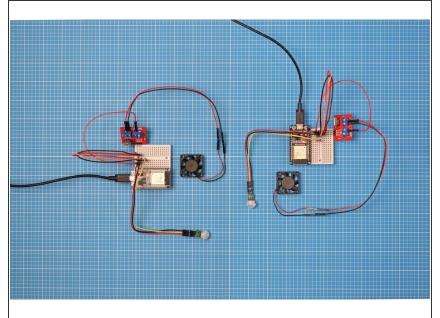

- Wave your hand around one of the PIR sensors. You should be able to see fan spin on the other device.
- Try this again on the other PIR sensor and make sure the other fan spins.
- Be careful not to put fingers or foreign objects near the fan blades with the device powered on.

Step 24 — Building the enclosure



- Now that your device is working you can now think about what kind of enclosure you want to encase it in.
- We have a few different examples of enclosure design or feel free to invent your own!

Your electronics are ready for use in an enclosure!